



## Husqvarna HiPERFLOOR - Maintenance Requirements:

Husqvarna HiPERFLOOR is made up by the following systems:

HiPERFLOOR PREMIUM  
HiPERFLOOR COMMERCIAL  
HiPERFLOOR INDUSTRIAL

The following maintenance requirements apply for all HiPERFLOOR systems.

1. Spills to be cleaned from surface immediately after they occur.
2. Areas where heavy soiling exist will require localised cleaning prior to cleaning entire area.
3. In high traffic areas; burnish daily with a high speed burnish with red nylon pads.
4. Where cleaning of the floor with detergent is require:
  - Only use Husqvarna approved, Husqvarna Polished Concrete Cleaner.
  - Apply the HPC Cleaner via use of Auto Scrubber or:  
Apply the HPC Cleaner via mop with clean water.
  - In either situation, always rinse floor with clean water after use.

For low traffic areas; Use the above steps when necessary.

We recommend the re-application of HiPERGUARD Green Seal or Premium Enhance every 5-7 years.

Postal Address  
Locked Bag 5, Central Coast BC, NSW 2252  
7499  
AUSTRALIA

Office Address  
4 Pioneer Avenue, Tuggerah NSW 2259+61 (0) 2 4352 7400  
AUSTRALIA

Telephone  
+61 (0) 2 4352 7400

Fax  
+61 (0) 2 4352 7400

[www.husqvarnagroup.com](http://www.husqvarnagroup.com)